

GM Northstar Water Pump Wrench

Item# W89399

Removes and installs water pump assembly on GM Northstar 4.0L and 4.6L engines.



Fan Clutch Wrench Set

Item# W89400

Allows easy removal of fan clutches using a single hub nut. Includes 1-7/16", 1-9/16", 1-7/8" and 2-13/16" hub nut wrenches and 2-1/8", 2-1/4", 2-3/8", 3", and 3-1/4" pulley holding wrenches.



Serpentine Belt Tool

Item# W89716

Remove and install belts on serpentine systems using spring loaded idler pulleys. Fits idler pulleys requiring 13mm, 14mm, 15mm, 16mm, 18mm hex, or 3/8" or 1/2" square drive. Includes GM fan clutch pulley holding attachment.



Engine Cylinder Hone

Item# W80560

Features flexible shaft and adjustable honing tension. Fits bores 2" to 7" in diameter. 220 grit stones.



Piston Ring Compressor

Item# W89410

Includes multiple bands allowing for use on pistons 2-7/8" to 4-3/8" in diameter.



Valve Spring Compressor

Item# W89409

For servicing overhead valve engine with cylinder head removed. Includes small and large jaws for multiple applications.



Power Steering & Alternator Pulley Puller/Installer

Item# W89708

Removes and installs most pressed on alternator and power steering pump pulleys. Includes power steering line disconnect tool.



Harmonic Balancer Puller/Installer

Item# W89711

Removes and installs harmonic balancers on most car and light truck applications. Master set includes necessary bolts and adapters for most applications.



Steering Wheel Removal Set

Item# W89704

Includes steering wheel puller, lockplate depressor, and pivot pin removing tool. Puller includes bolts of various sizes and puller legs for vehicles with non-threaded hubs.



Pilot Bearing Puller

Item# W89742

For removal of pilot bearings or any other items requiring an internal puller. Four separate collet adapters for multiple applications.



Switch & Sensor Socket Set

Item# W89333

Remove and install sensors and switches on computerized engine control vehicles. Includes sockets for most O2 sensors, vacuum switches, oil sending units, and thermal sensor switches.



Double Flaring Tool

Item# W80670

Flares copper, brass, aluminum, and mild steel tubing. Single or double flare tubing sizes: 3/16", 1/4", 5/16", 3/8", and 1/2".



1/2" Drive Torque Wrench

Item# M199

1/2" Drive with a torque range of 30 to 250 ft.-lbs.



Bearing Race & Seal Driver Set

Item# W89715

Quickly and easily install bearing races and seals without damage. Nine discs cover sizes 1.565" to 3.180". Use tapered side of disc to install races and flat side to install seals.



Rear Axle Bearing Puller

Item# W89326

These specially designed pullers allow for the removal of semi-floating rear axle bearings. Fits bearing tube diameters of 1" to 2-7/8". Use with 5/8"-18 thread slide hammer.



Front Hub Puller/Installer

Item# W89324

The universal puller removes front hubs from most FWD cars without damaging wheel bearings. The installer is used to pull the axle shaft into the front hub on Ford vehicles.



Slide Hammer Puller Set

Item# W89725

Contains slide hammer with 5/8"-18 thread. Attachments include internal/external jaw puller, rear axle puller, locking plier adapter, puller hook, and dent puller.



Ball Joint/U-Joint Press

Item# W89304

Services press fit ball joints without removing the control arm. Adapters fit many applications including '67 to current 4WD trucks with Dana 44 axle. Can also be used to press most car and light truck u-joints.



4WD Locknut Socket Set

Item# W89319

Removes and installs spindle nuts on many 2WD and 4WD light truck applications. Includes front spindle puller slide hammer adapter for most 4WD trucks.



Ball Joint Press Adapter Set

Item# W89305

Expands the application coverage of the W89304 Ball Joint Press. Includes adapters for most GM, Ford, and Dodge 2WD and 4WD trucks, vans, and sport utility vehicles.



Axle Nut Socket Set

Item# W89318

Removes and installs front axle nuts on most vehicles. Includes 29mm, 30mm, 31mm, 32mm, 33mm, 34mm, 35mm, 36mm, and 38mm extra long 1/2" drive 6pt. sockets.



Front End Service Set

Item# W89303

For separating most types of tie rods, pitman arms, and ball joints on most automotive and light truck applications.



Wheel Bearing Locknut Socket Set

Item# W89314

Removes and installs wheel bearing locknuts on many light trucks.

Includes:

- 2-3/8" 6pt. hex
- 2-3/8" 6pt. rounded
- 2-1/2" 6pt. hex
- 2-1/2" 6pt. rounded
- 2-9/16" 6pt. rounded
- 2-3/4" 6pt. rounded
- 55mm 6pt. hex



Tie Rod/Ball Joint Separator Set

Item# W89310

For separating most types of tie rods, pitman arms, and ball joints. Five different sizes cover most automotive and light truck applications.



Strut Spring Compressor

Item# W89322

Compresses strut springs on most automotive and light truck applications.



Disc Brake Caliper Service Set

Item# W89200

Rotates pistons back into rear calipers with integral parking brake assemblies. Fits most domestic and import vehicles. Includes adapter for front caliper piston retraction.



Coil Spring Compressor

Item# W89311

Safely compresses coil springs that can be accessed from the center of the coil. Can be used on straight or curved coil springs. 8-1/4 to 14" jaw opening range.

